


How to give a Chromebook a factory Reset

*You can make your Chromebook run like new again by doing a factory reset

*Please Follow these steps:

- Turn on your Chromebook
- On your keyboard press ESC + (Refresh Key) + Power button. The Refresh Key is key with the circle and an arrow on the keyboard.
- The screen will display a yellow exclamation point (!).

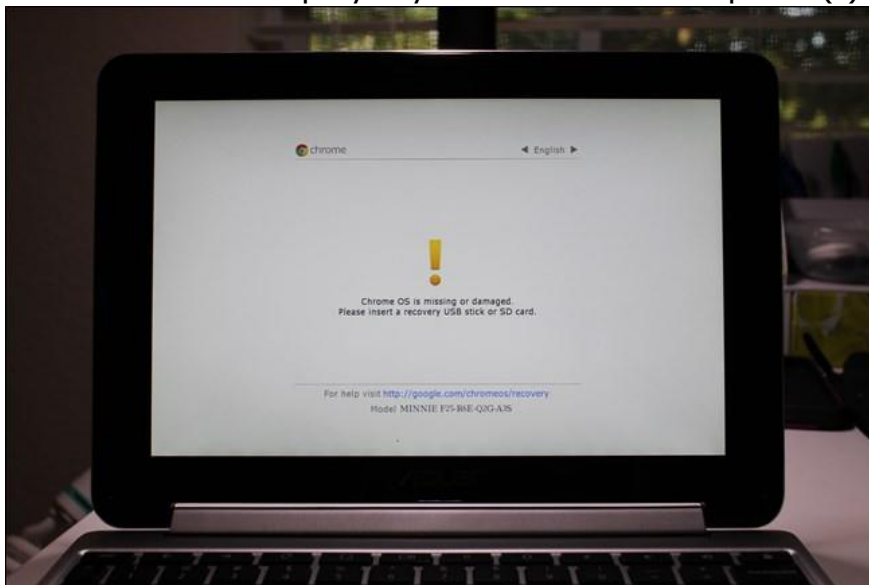

- Press Ctrl + D to begin dev mode, then ENTER.
- The screen displays a red exclamation point.



- Press SPACE then ENTER. And the Chromebook will reboot by itself
- All done, you now have a fresh Chromebook.